 
 
 


hkg19007
x325o0305000075

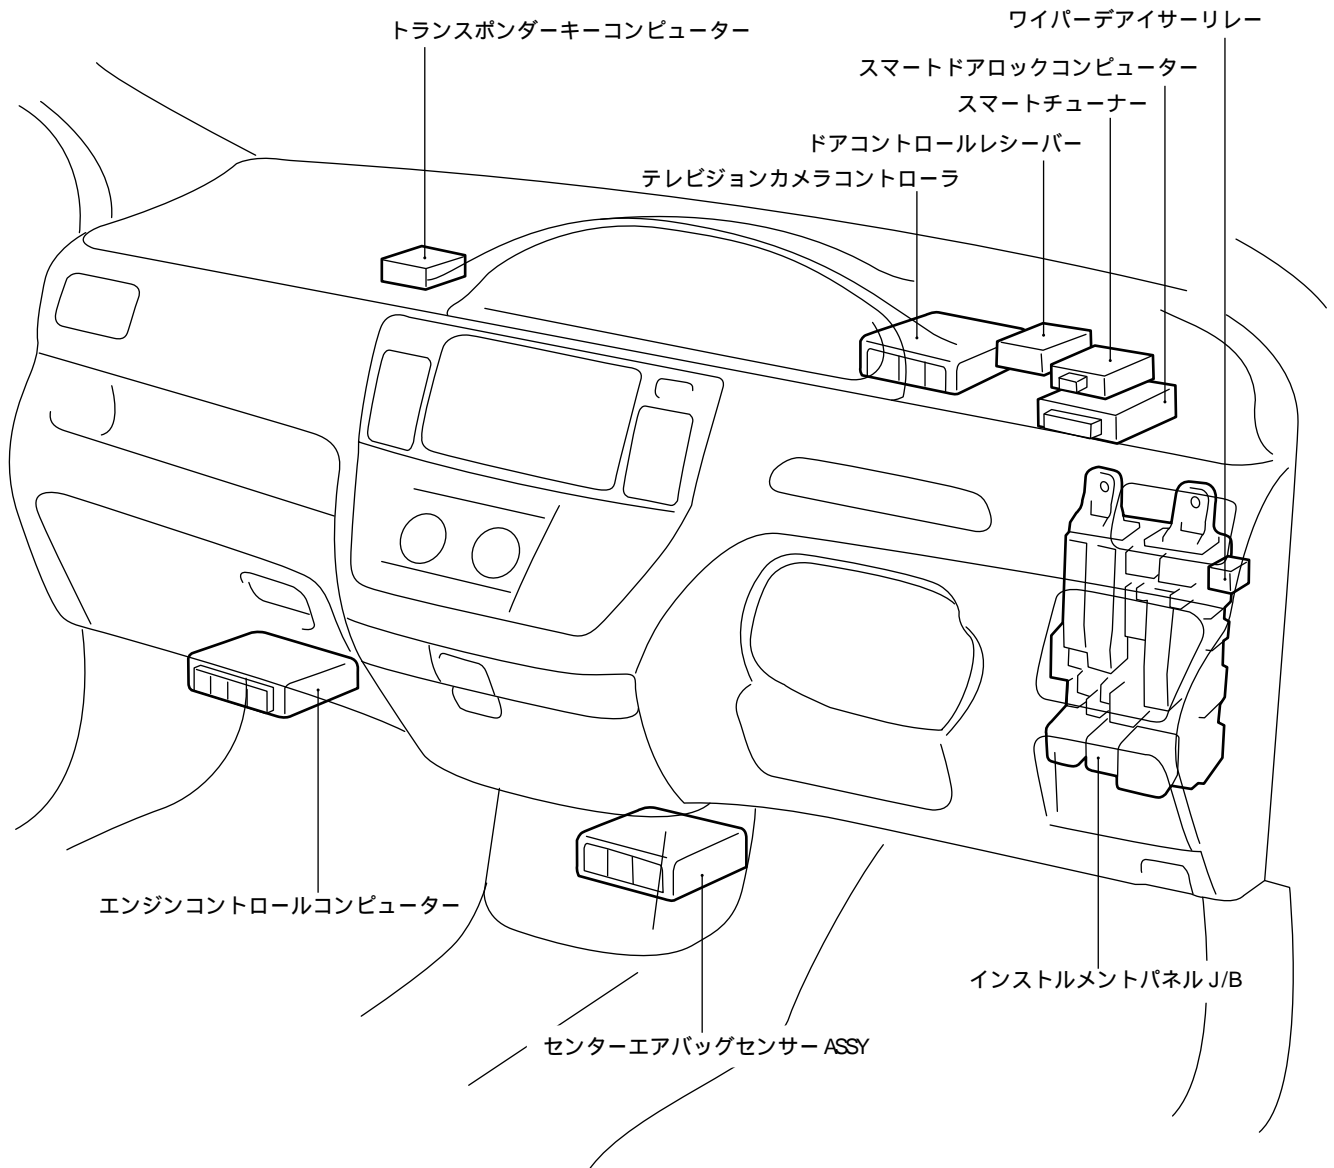



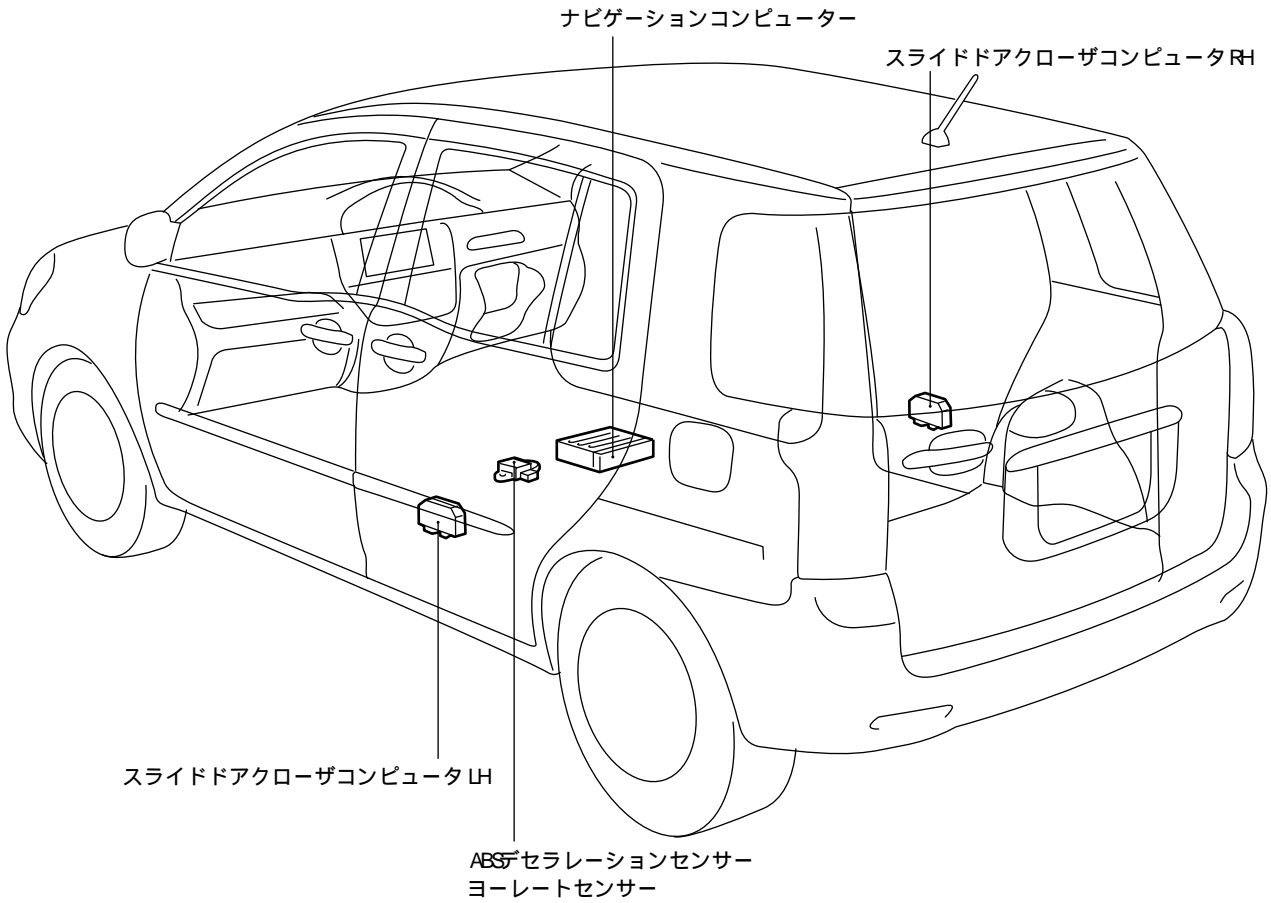



hkg19009
x325o0305000075

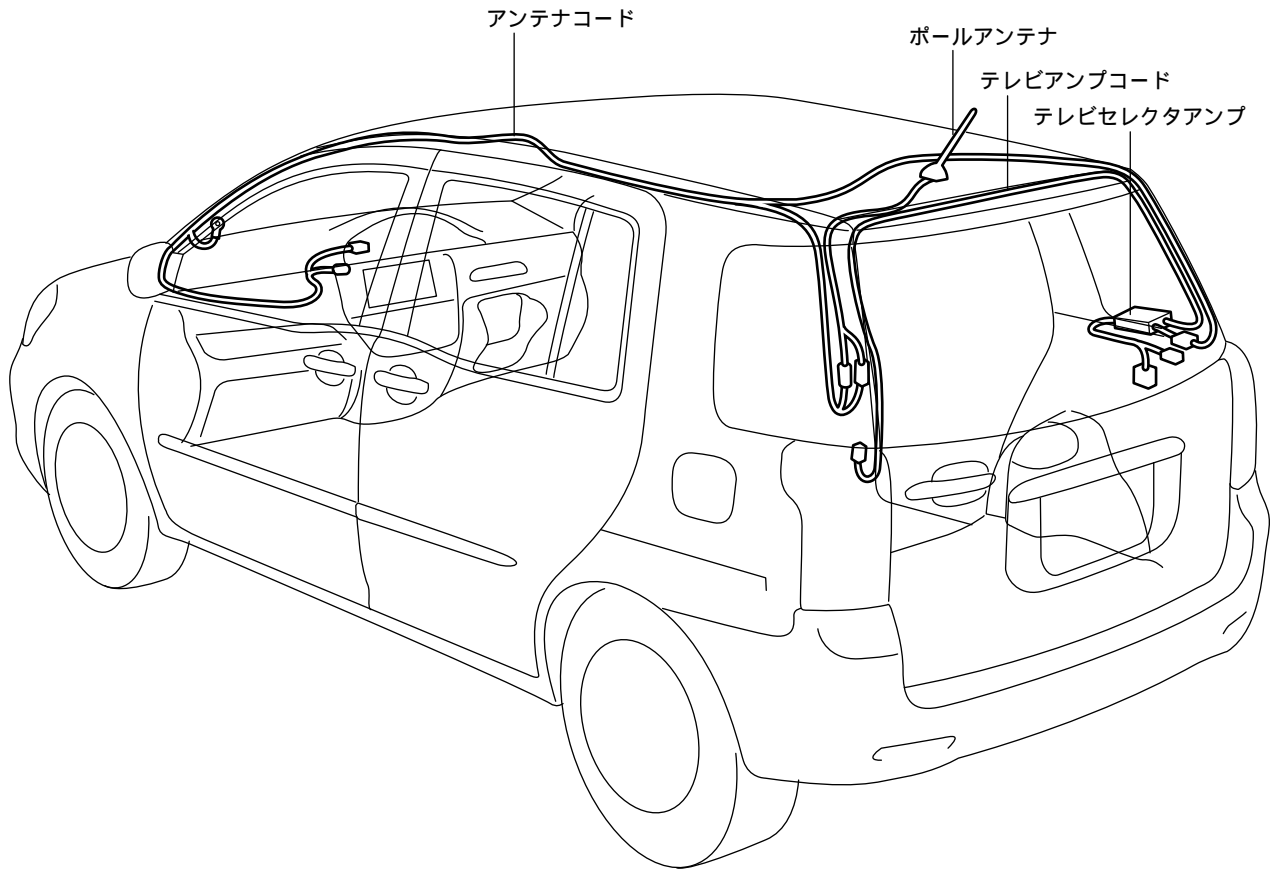

    
hkg19010
x325o0305000075

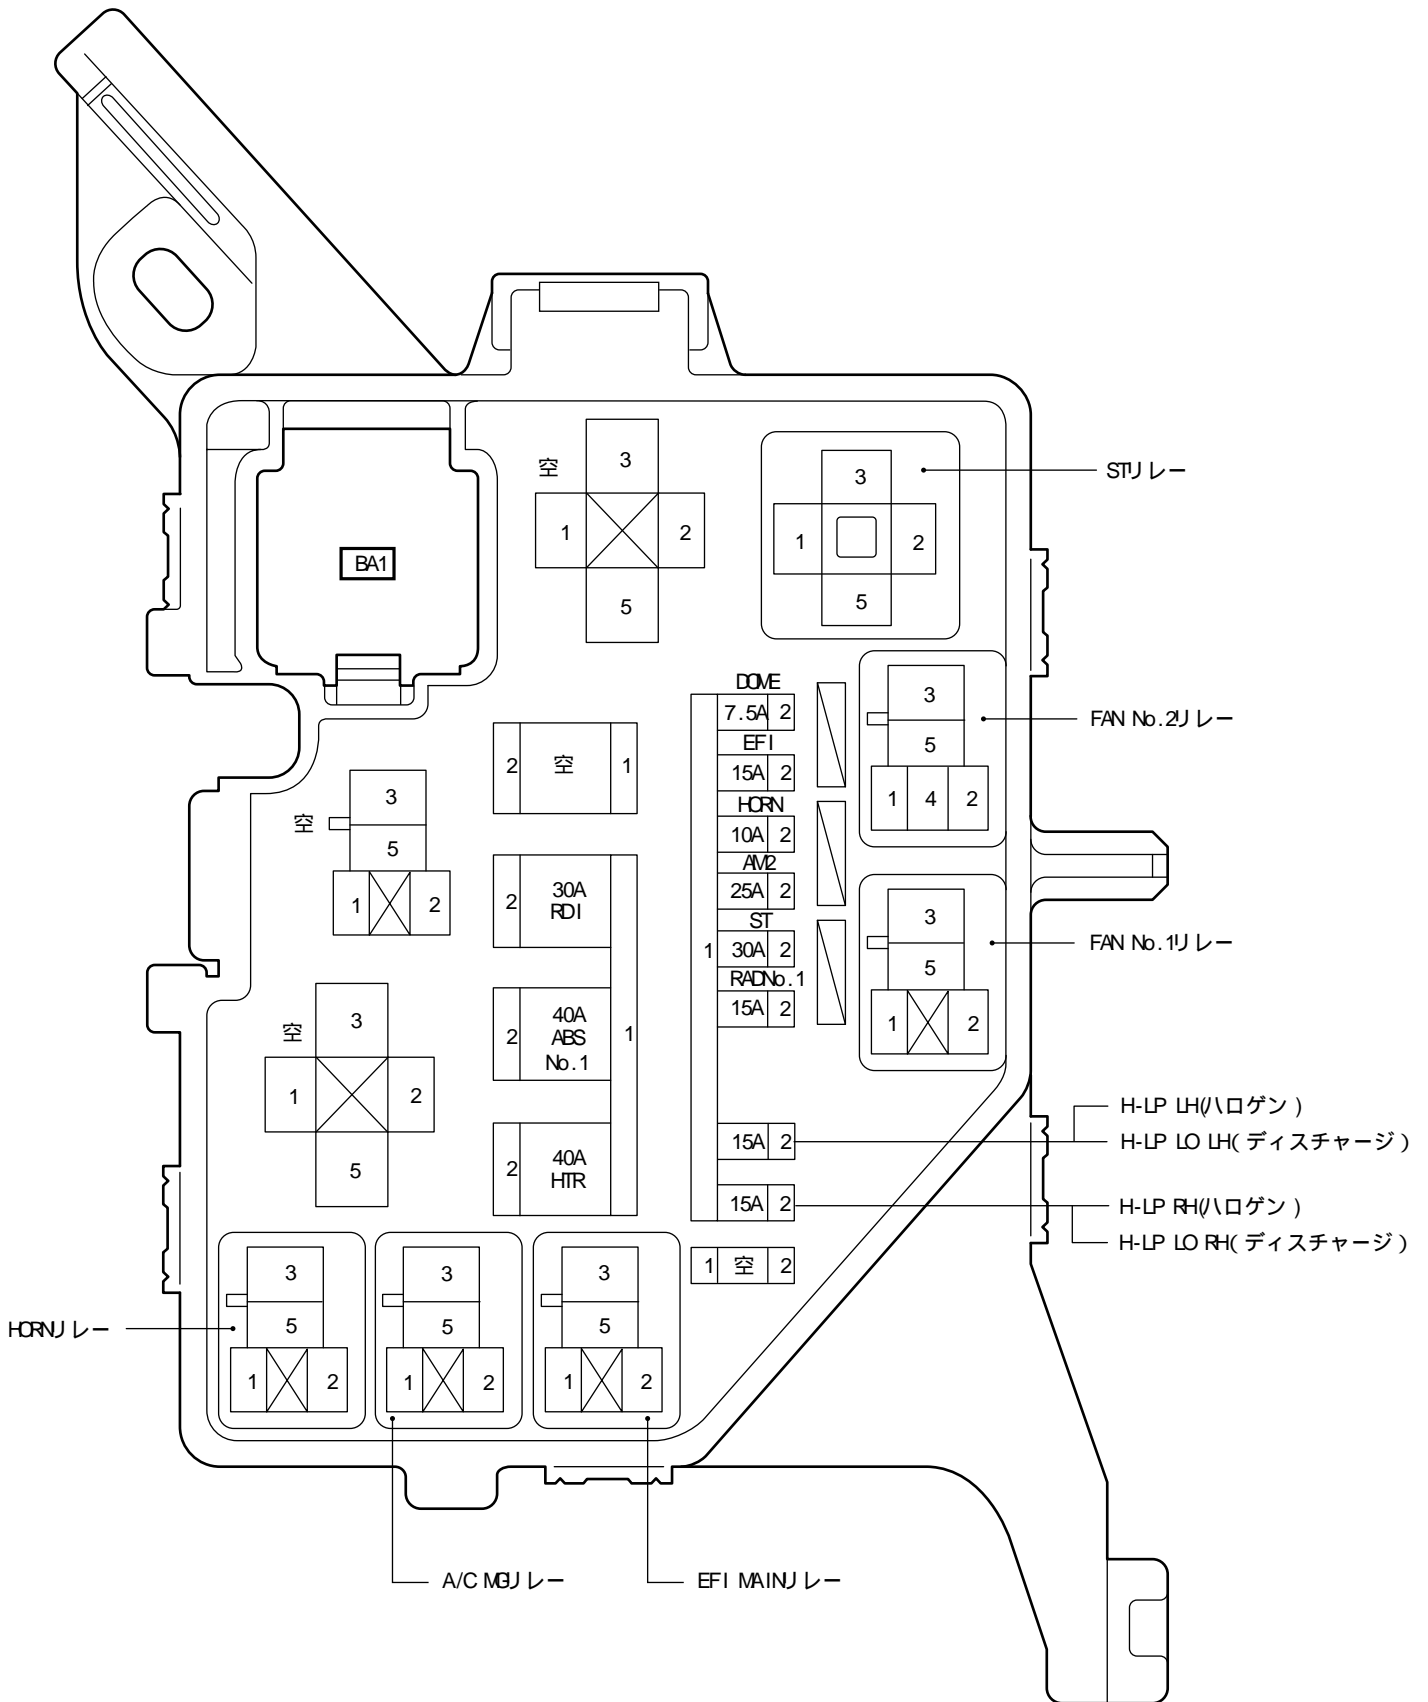

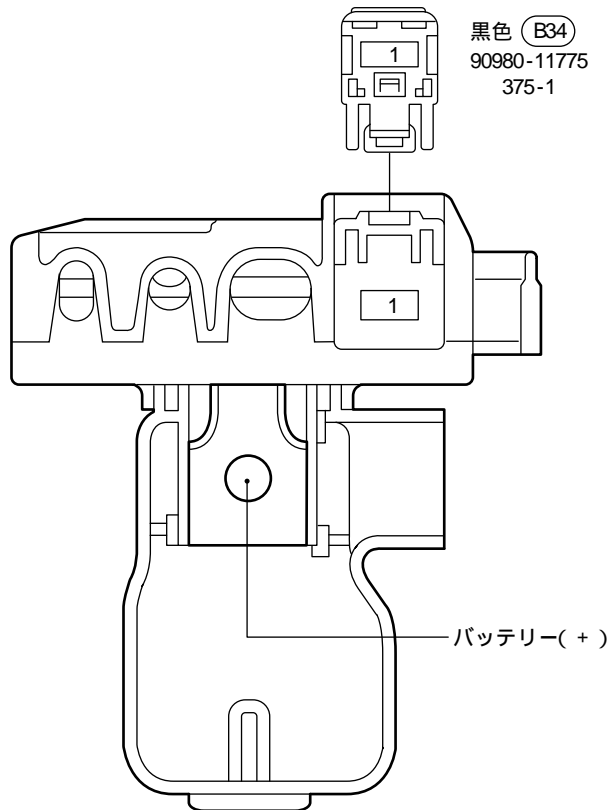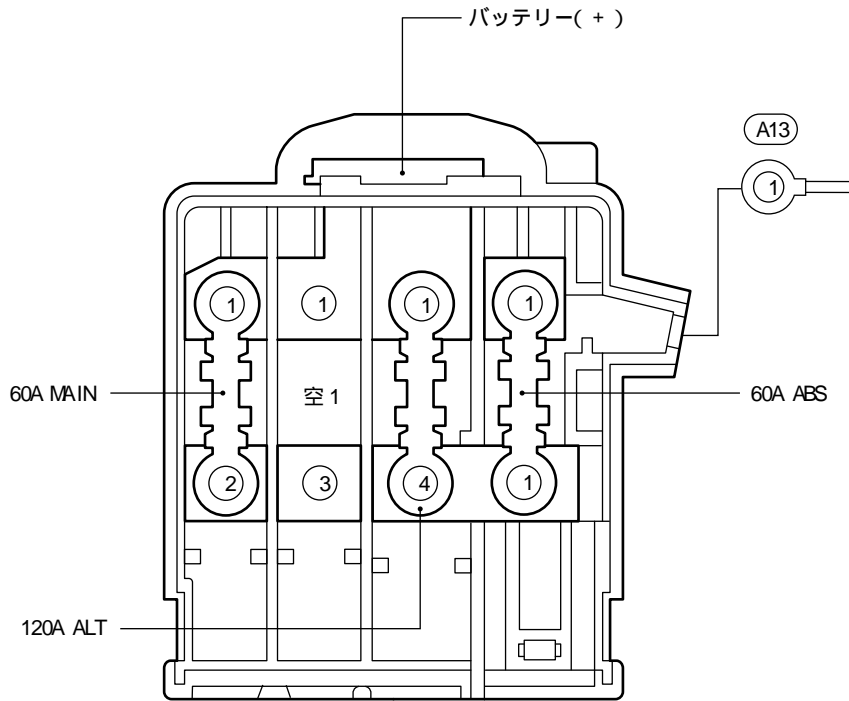


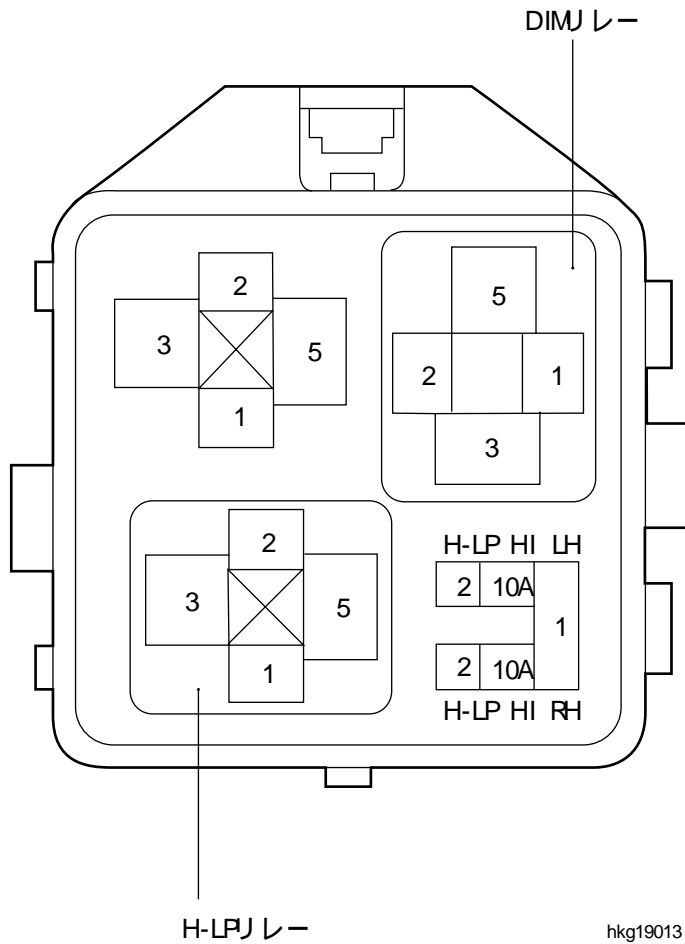


hkg19013
x325o0305000075

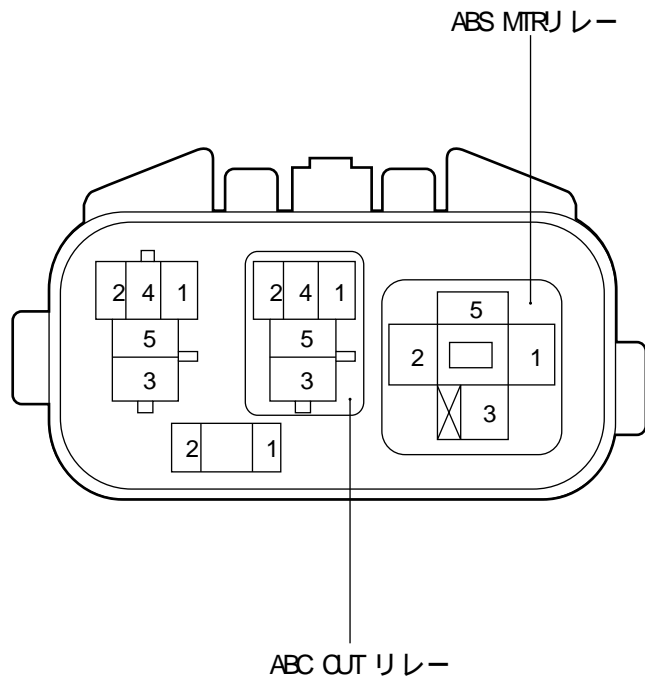 


hkg19014
 x325o0305000075

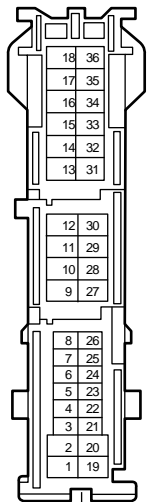 

乳白色 (イB)
90980-12383
040 -12,090 -24

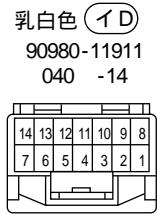 


乳白色 (イD)
90980-11911
040 -14

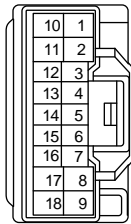 



乳白色 (イH)
90980-11973
040 -10,090 -8



 
乳白色 (イC)
90980-12094
040 -16

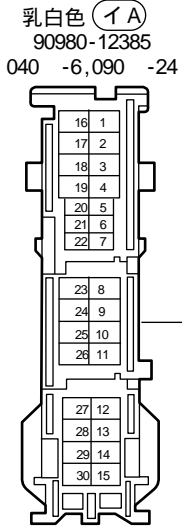










乳白色 (イA)
90980-12385
040 -6,090 -24

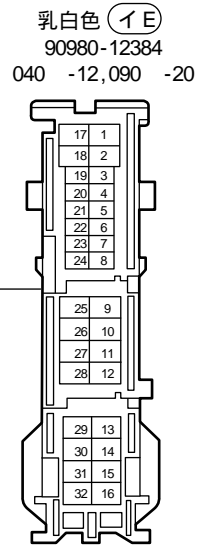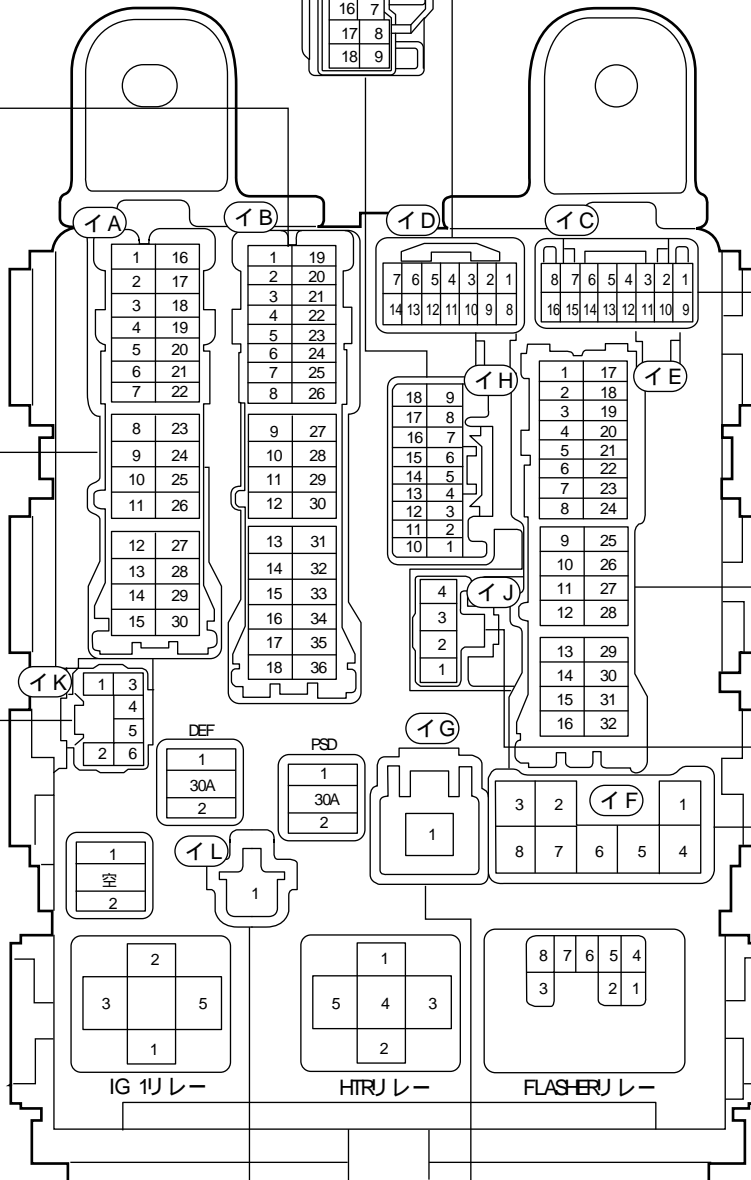  


乳白色 (イE)
90980-12384
040 -12,090 -20

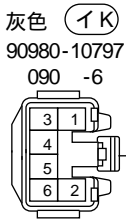 

灰色 (イK)
90980-10797
090 -6

         


乳白色 (イJ)
90980-11013
090 -4



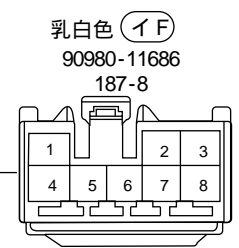 




乳白色 (イF)
90980-11686
187-8

 青色 (イL)
90980-11259
187-1




青色 (イG)
90980-11775
375-1

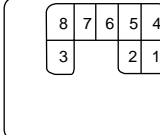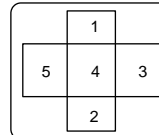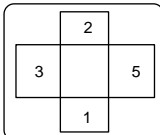   


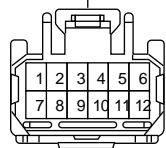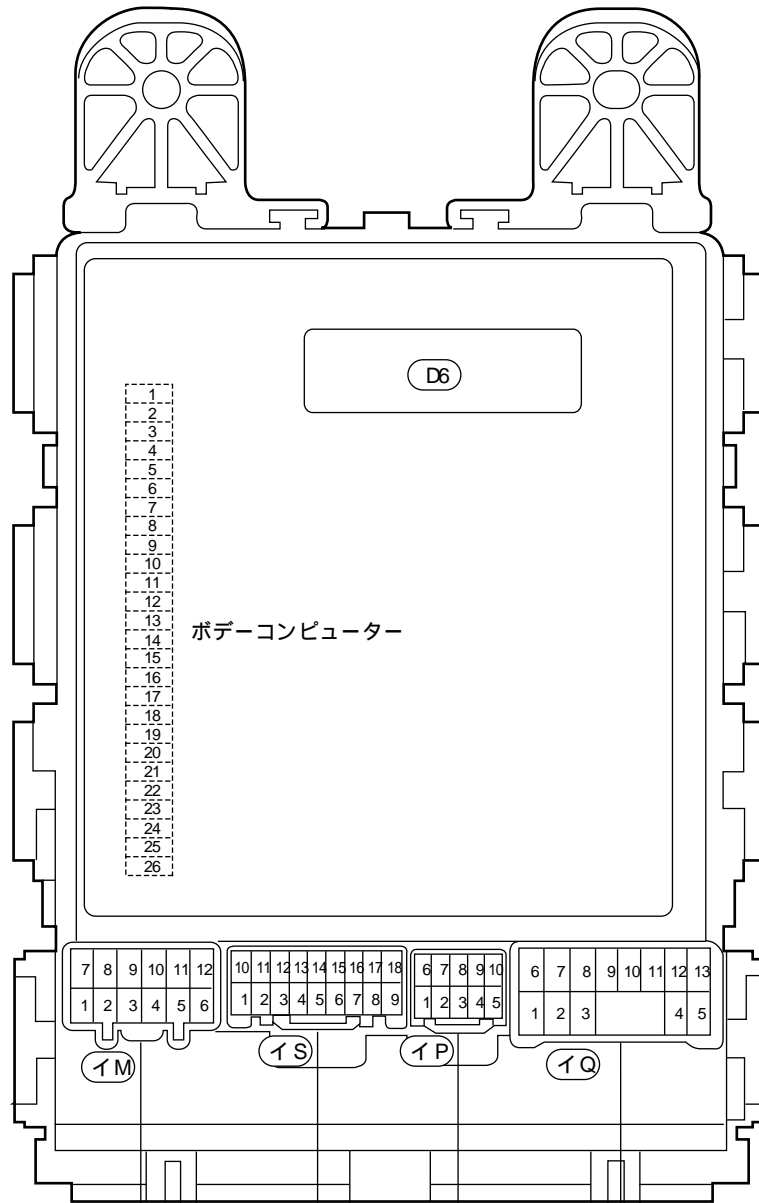  


乳白色 (イM)
90980-11661
090 -12

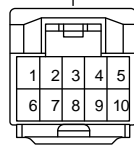 


乳白色 (イP)
90980-11923
040 -10

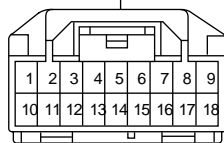 









乳白色 (イS)
90980-11913
040 -18

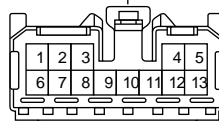 



乳白色 (イQ)
90980-11542
090 -13

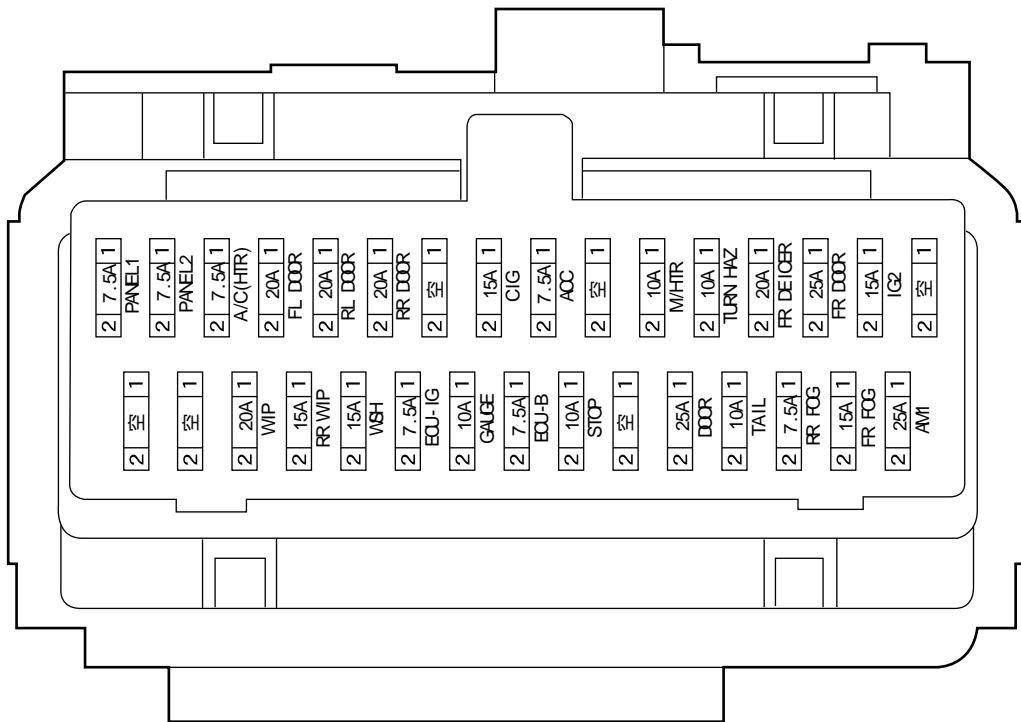 


hkg19017
x325o0305000075

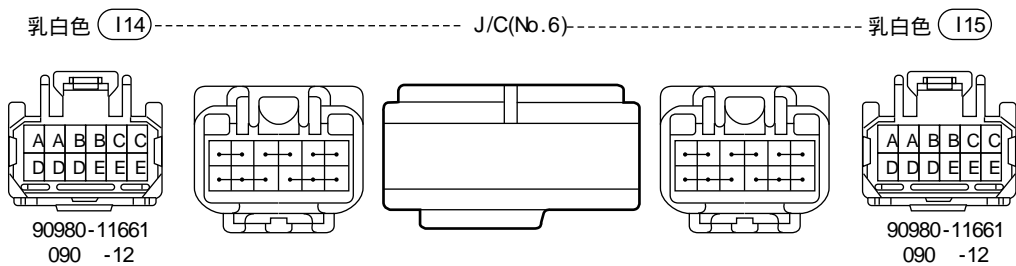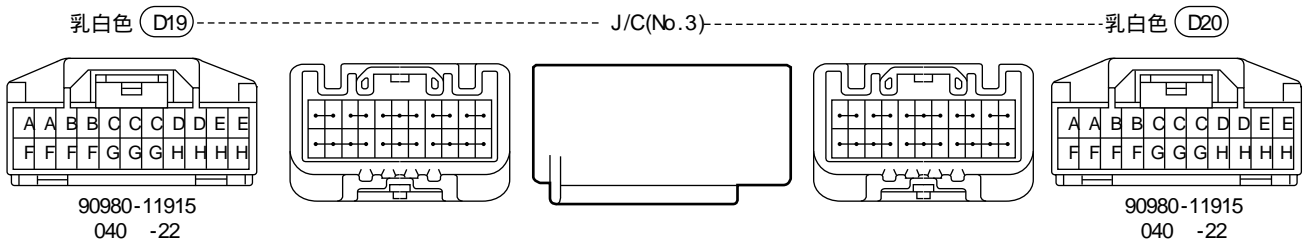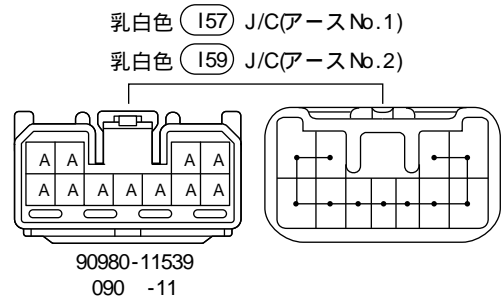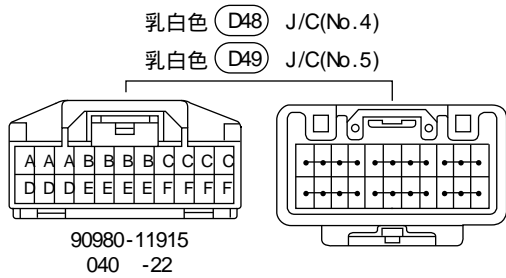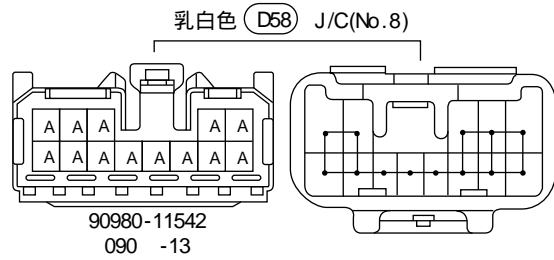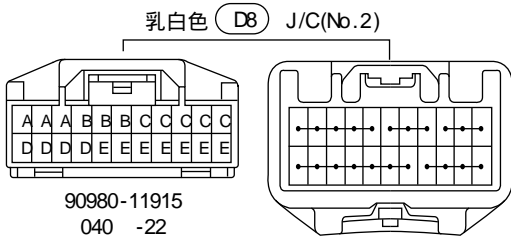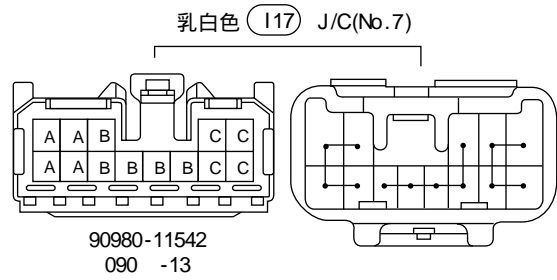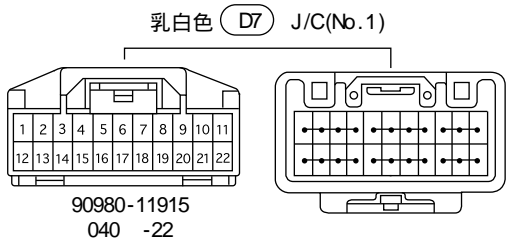        

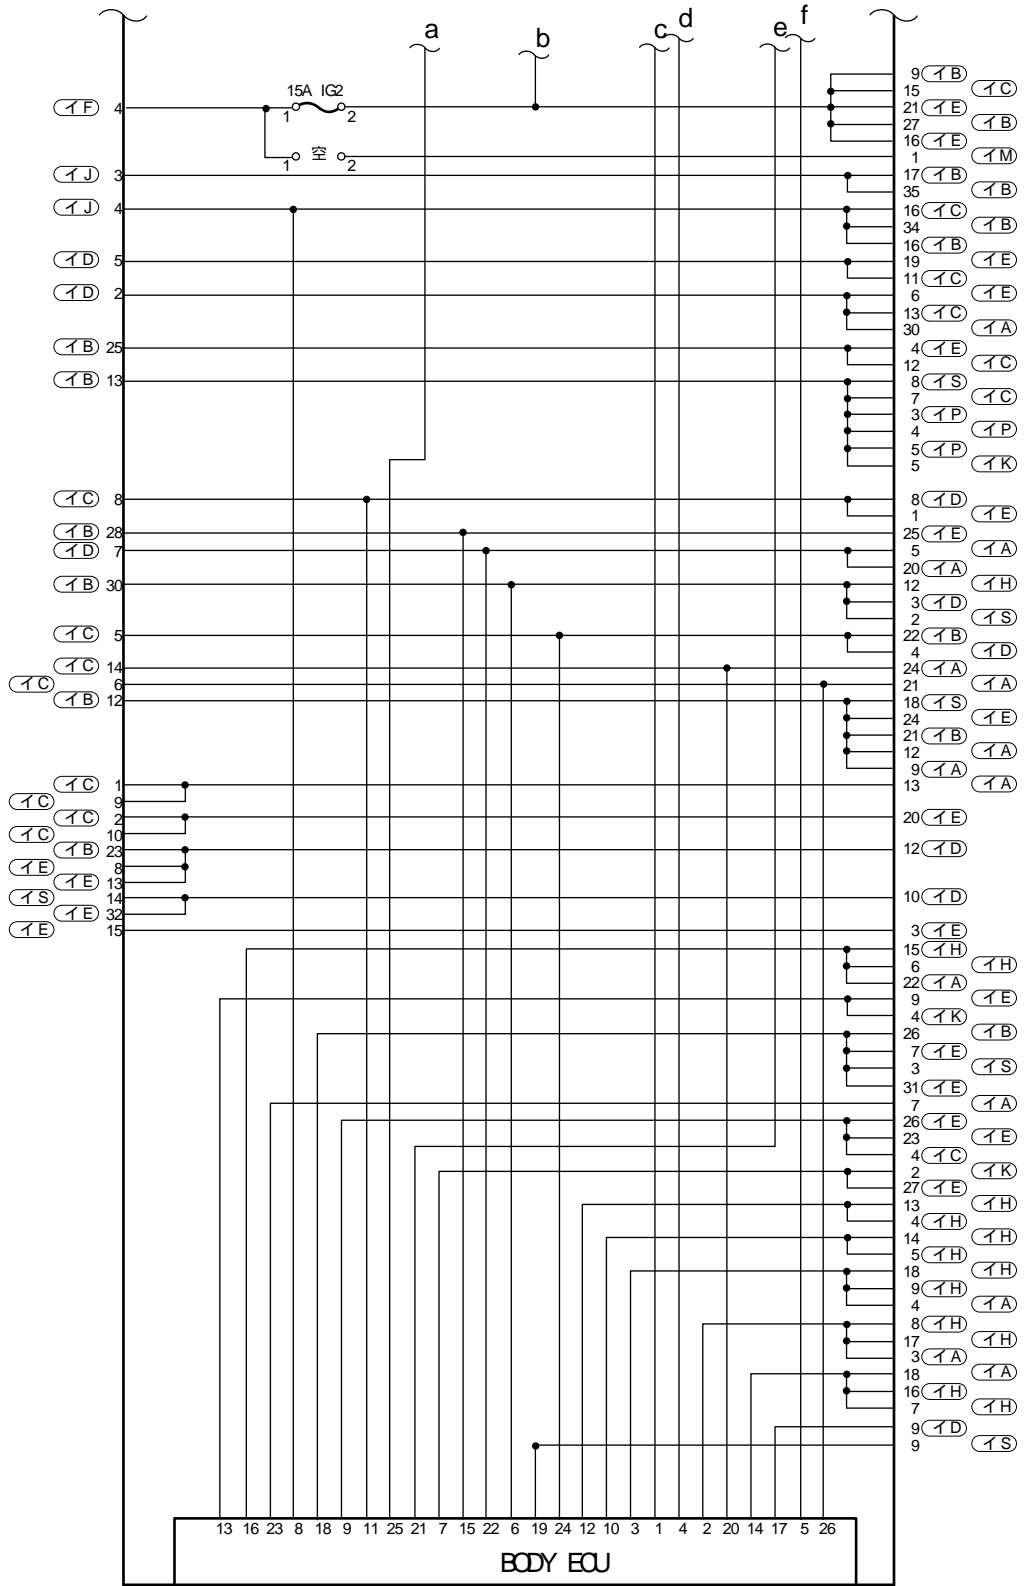 

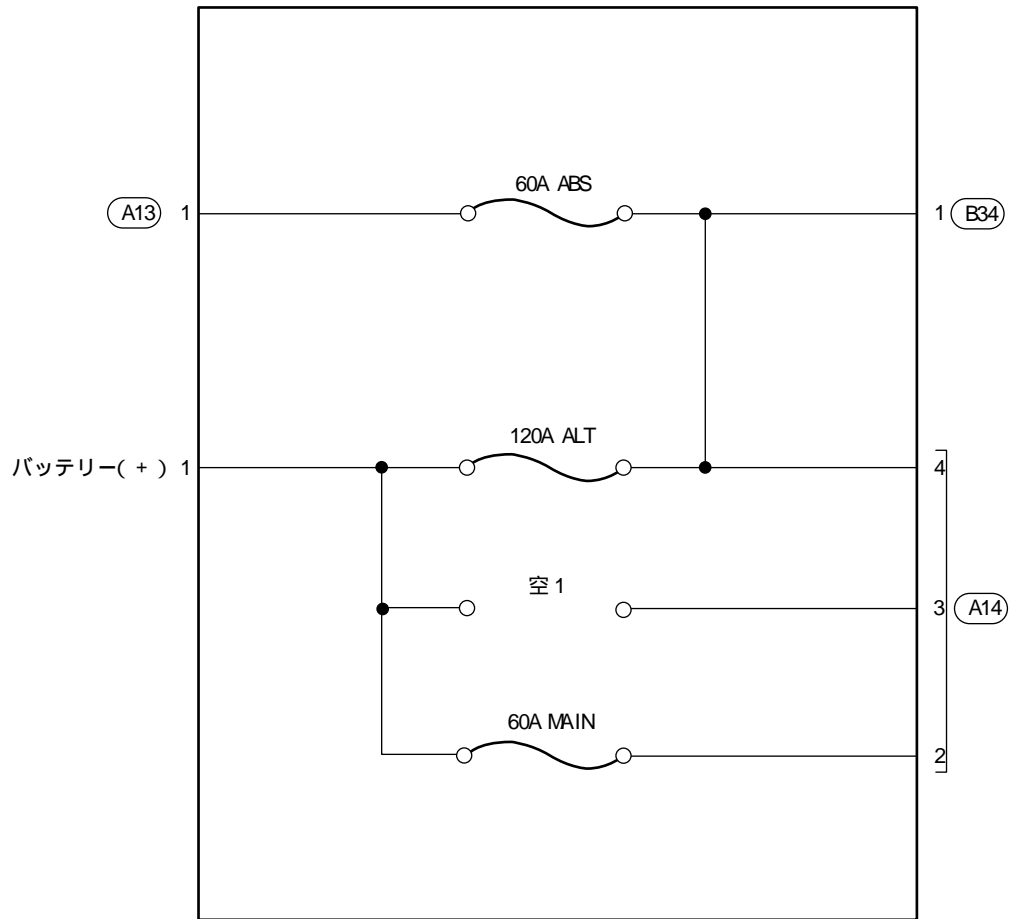 

hkg19021
x325o0305000075

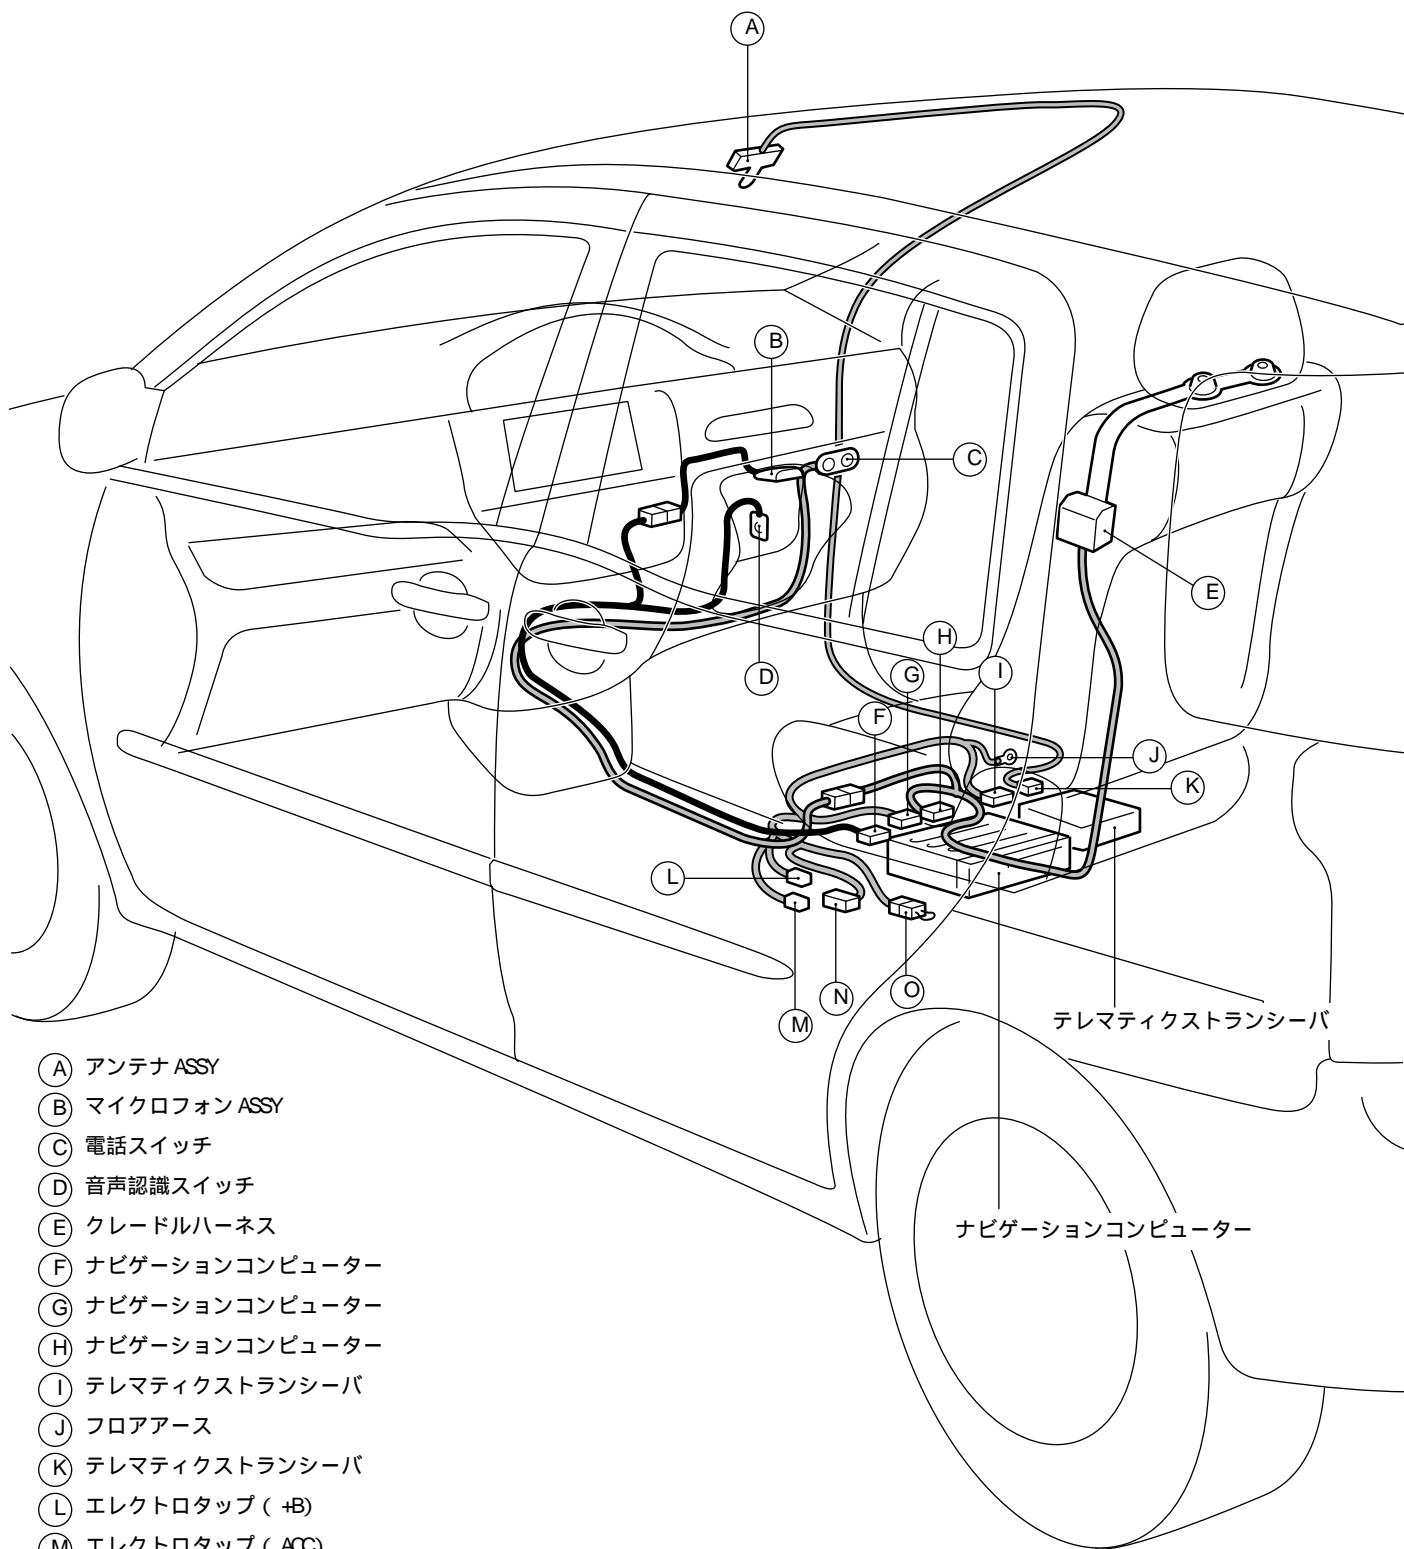 

- Ⓐ アンテナ ASSY
- Ⓑ マイクロフォン ASSY
- Ⓒ 電話スイッチ
- Ⓓ 音声認識スイッチ
- Ⓔ クレドルハーネス
- Ⓕ ナビゲーションコンピューター
- Ⓖ ナビゲーションコンピューター
- Ⓗ ナビゲーションコンピューター
- Ⓘ テレマティクスランシーバ
- Ⓙ フロアアース
- Ⓚ テレマティクスランシーバ
- Ⓛ エレクトロタップ (+B)
- Ⓜ エレクトロタップ (ACC)
- Ⓝ ヒューズ (7.5A)
- Ⓞ ショートコネクター

テレマティクスランシーバ

ナビゲーションコンピューター